

OPERATOR'S MANUAL

81249X

SPECIFICATIONS, SERVICE KITS, GENERAL INFORMATION, TROUBLESHOOTING

INCLUDE MANUALS: 87113X LOWER PUMP END (PN 876115), 842010 AIR MOTOR (PN 876117) & S-1099
GENERAL INFORMATION MANUAL (PN 876018).

81250X

RELEASED: 10-7-03
REVISED: 2-9-04
(REV. 03)

2" AIR MOTOR
2:1 RATIO
3" STROKE

81249X and 81250X TWO-BALL PUMP SERIES STAINLESS STEEL



**READ THIS MANUAL CAREFULLY BEFORE INSTALLING,
OPERATING OR SERVICING THIS EQUIPMENT.**

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

SERVICE KITS

- Use only genuine Bink's replacement parts to assure compatible pressure rating and longest service life.
- **861150** for repair of air motor section.
- **861140** for repair of 8711X0 lower pump ends.
- **861141** for repair of 8711X1 lower pump ends.

SPECIFICATIONS


Model Series (refer to option chart)	81249X and 81250X
Type	Air Operated, Two-ball
Ratio	2:1
Air Motor	842010
Motor Repair Kit	861150
Motor Diameter	2" (5.08 cm)
Stroke (Double Acting)	3" (7.62 cm)
Air Inlet (female)	1/4 - 18 N.P.T.F. - 1
Lower Pump End Series	
812490	871130
812491	871131
812500	871140
812501	871141
Lower Pump Repair Kit	86114X
Material Inlet	
81249X	immersed
81250X (female)	1-1/4 - 11-1/2 N.P.T.F.
Material Outlet (female)	3/4 - 14 N.P.T.F.
Weight	See chart

PERFORMANCE

Air Inlet Pressure Range	0 - 150 p.s.i. (0 - 10.3 bar)
Fluid Pressure Range	0 - 351 p.s.i. (0 - 24.2 bar)
Maximum Rec'd Cycles / Minute	120
Displacement In.³ Per Cycle	8.28
Volume / Cycle	4.59 oz. (135.6 ml)
Cycles Per Gallon	27.9
Flow @ 60 Cycles / Minute	2.15 g.p.m. (8.14 l.p.m.)
Noise Level @ 100 p.s.i.	80 db(A) *
Accessories Available	873184 Wall Mount Bracket

* The pump sound pressure level has been updated to an Equivalent Continuous Sound Level (L_{Aeq}) to meet the intent of ANSI S1. 13-1971, CAGI-PNEUROPS S.1 using four microphone locations.

PUMP DATA

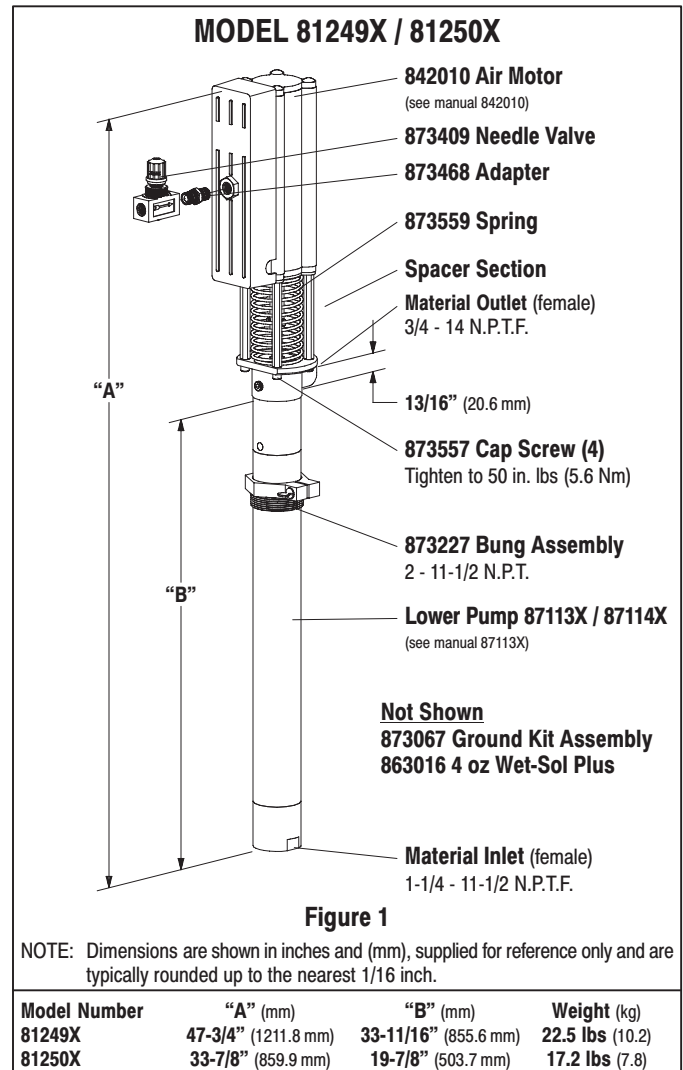

IMPORTANT

This is one of the four documents which support the pump. Replacement copies of these forms are available upon request.

- 81249X MODEL OPERATOR'S MANUAL
- GENERAL INFORMATION - AIR OPERATED PISTON PUMPS
- 87113X LOWER PUMP END OPERATOR'S MANUAL
- 842010 AIR MOTOR OPERATOR'S MANUAL

BINKS®

North American Office
ITW Industrial Finishing
195 Internationale Blvd
Glendale Heights, IL 60139
Tel. 630-237-5000 Fax 630-237-5011

International Office
ITW Industrial Finishing
Ringwood Road, Bournemouth
Dorset, BH11 9LH, England
Tel. 0 1202 571111 Fax 0 1202 593883

PUMP OPTION DESCRIPTION CHART

812 XX X

CONTAINER SUITABILITY ———
 PACKING MATERIAL ———

CONTAINER SUITABILITY

49 - 55 Gallon
 50 - Universal (Stub)

PACKING MATERIAL

0 - UHMW-PE (upper and lower)
 1 - Teflon (upper and lower)

SPRING ARRANGEMENT

No Spring

PLUNGER TYPE

300 series Stainless Steel

GENERAL DESCRIPTION

Binks models 81249X and 81250X series two-ball, 2:1 ratio, double acting pumps are designed for the application and transfer of low - medium viscosity fluids. It uses Stainless steel and other materials which make it compatible with most water and solvent borne paints and adhesives and with most solvents. The two-ball design provides better priming of the lower foot valve. Double acting pumps will deliver material on both the up and down stroke.

NOTE: If this pump was purchased separately (not part of a system), consult your sales representative for compatible dispensing accessories which will best match the application. All accessories must be able to withstand the maximum pressure developed by the pump.

⚠️ WARNING HAZARDOUS PRESSURE. Do not exceed maximum operating pressure of 351 p.s.i. (24.2 bar) at 150 p.s.i. (10.3 bar) inlet air pressure.

PUMP RATIO X INLET PRESSURE TO PUMP MOTOR	=	MAXIMUM PUMP FLUID PRESSURE
Pump ratio is an expression of the relationship between the pump motor area and the lower pump end area. EXAMPLE: When 150 p.s.i. (10.3 bar) inlet pressure is supplied to the motor of a 4:1 ratio pump it will develop a maximum of 600 p.s.i. (41.4 bar) fluid pressure (at no flow) - as the fluid control is opened, the flow rate will increase as the motor cycle rate increases to keep up with the demand.		

⚠️ WARNING Refer to general information sheet for additional safety precautions and important information.

NOTICE: Thermal expansion can occur when the fluid in the material lines is exposed to elevated temperatures. Example: Material lines located in a non-insulated roof area can warm due to sunlight. Install a pressure relief valve in the pumping system.

Replacement warning label (pn 873553) is available upon request.

TROUBLE SHOOTING

Pump problems can occur in either the air motor section or the lower pump end section. Use these basic guidelines to help determine which section is affected. Be sure to eliminate any possible non-pump problems before suspecting pump malfunction.

Pump will not cycle.

- No pressure to the motor. See motor manual.
- Damaged motor. Service motor.

No material at the outlet (pump continually cycles).

- Check the material supply, disconnect or shut off the air supply and replenish the material, reconnect.

Material on one stroke only (fast downstroke).

- The lower check may not be seating in the foot valve (see lower pump disassembly). Remove the check from the foot valve, clean and inspect the valve seat area. If check or foot valve are damaged, replace.


Material on one stroke only (fast upstroke).

- The middle packings may be worn (see lower pump disassembly). Replace the seals as necessary.

PUMP CONNECTION - UPPER / LOWER

NOTE: All threads are right hand.

1. Lay the pump assembly on a workbench.
2. Remove four (873557) cap screws and pull the air motor from the lower pump end until the motor piston rod is in the "down" position and the lower pump end rod is in the "up" position.
3. Remove the (873556) cotter pin and (873554) pin, releasing the air motor from the lower pump end.

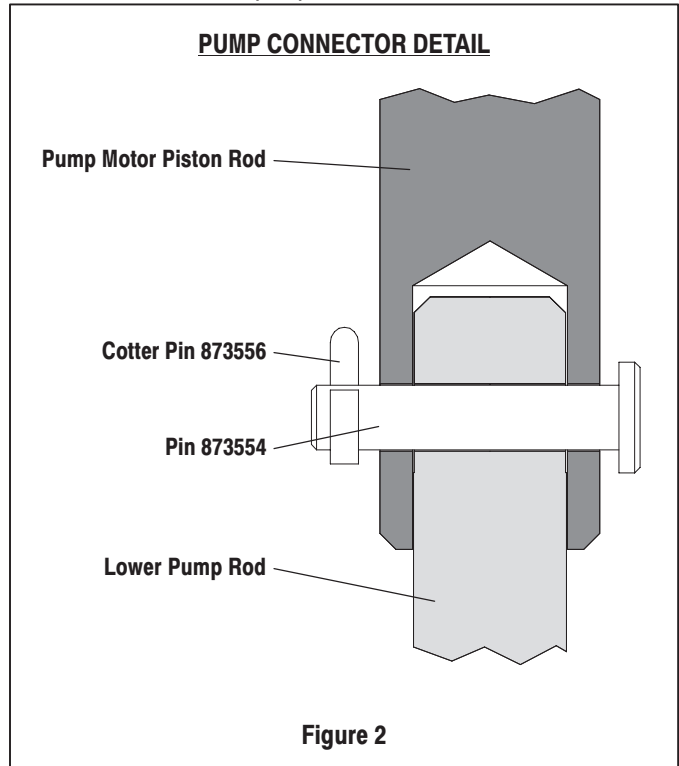

REASSEMBLY

1. Assemble motor piston rod to the lower pump end rod, aligning thru holes.
2. Assemble (873554) pin through hole, securing rods.
3. Assemble (873556) cotter pin through hole in pin.
4. Align tie rods with holes in pump outlet body.
5. Assemble four (873557) cap screws, securing air motor. NOTE: Tighten cap screws to 50 in. lbs (5.65 Nm).